











## PERIODICAL CHECKS

**ALWAYS** check up all disassembled parts if they are suitable for re-use.

1. Check up all toothed gears including the shafts for wear, grooves and cracks.
2. Check if threaded parts have no damaged threads.
3. Regularly check the wear of the automatic brake linings.
4. Clean brake linings, ratchet, ratchet pawl and thrust washer with a wire brush and check condition.
5. Brake linings that reached their minimum thickness needs to be replaced. Regardless of thickness, replace also brake linings that have considerably worn surface.
6. Check up especially the wire rope – part that causes problems most often.

## SHARK WINCH 800-102601 SPECIFICATIONS

Lifting capacity	Wire rope length	Wire rope diameter
540 kg	10 m	4 mm

### ASP Group s.r.o.

Staroplzenecka 290 326 00 Letkov  
Czech Republic

Tel: +420 378 21 21 21

[info@aspgroup.cz](mailto:info@aspgroup.cz)

[www.aspgroup.cz](http://www.aspgroup.cz)

---

ASP Group s.r.o. reserves the right to make changes to technical parameters, construction or design without prior notice. In case of any queries contact your dealer or ASP Group s.r.o.